# CKD

# Electric Actuator FGRC-G Series

# **INSTRUCTION MANUAL**

SM-A40845-A



- Read this Instruction Manual before using the product.
- Read the safety notes carefully.
- Keep this Instruction Manual in a safe and convenient place for future reference.

# PREFACE

Thank you for purchasing CKD's **"FGRC-G Series" electric actuator**. This Instruction Manual contains basic matters such as installation and usage instructions in order to ensure optimal performance of the product. Please read this Instruction Manual thoroughly and use the product properly. Keep this Instruction Manual in a safe place and be careful not to lose it.

Product specifications and appearances presented in this Instruction Manual are subject to change without notice.

- The product is intended for users who have basic knowledge of materials, wiring, electricity, and mechanisms. CKD shall not be responsible for accidents caused by persons who selected or used the product without knowledge or sufficient training.
- Since there are a wide variety of customer applications, it is impossible for CKD to be aware of all of them. Depending on the application or usage, the product may not be able to exercise its full performance or an accident may occur due to fluid, wiring, or other conditions. It is the responsibility of the customer to check the product specifications and decide how the product shall be used in accordance with the application and usage.

# SAFETY INFORMATION

When designing and manufacturing any device incorporating the product, the manufacturer has an obligation to ensure that the device is safe. To that end, make sure that the safety of the machine mechanism of the device and the electric system that controls such mechanism is ensured.

In order to use our products safely, it is important to select, use, handle, and maintain the products properly.

Observe the warnings and precautions described in this Instruction Manual to ensure device safety.

Although various safety measures have been adopted in the product, customer's improper handling may lead to an accident. To avoid this:

#### Thoroughly read and understand this Instruction Manual before using the product.

To explicitly indicate the severity and likelihood of a potential harm or damage, precautions are classified into three categories: "DANGER", "WARNING", and "CAUTION".

| <b>ADANGER</b> Indicates an imminent hazard. Improper handling will cause death or set injury to people. |   |
|--|---|
| <b>WARNING</b> Indicates a potential hazard. Improper handling may cause death or set injury to people.  |   |
|  | Indicates a potential hazard. Improper handling may cause injury to people or damage to property. |

Precautions classified as "CAUTION" may still lead to serious results depending on the situation. All precautions are equally important and must be observed.

Other general precautions and tips on using the product are indicated by the following icon.

Indicates general precautions and tips on using the product.

### **Precautions on Product Use**

### 

Do not use the product for the following applications:

- · Medical equipment pertaining to sustainment and management of human life and body
- · Mechanism and mechanical device for transferring and transporting people
- · Critical parts for securing safety in a mechanical device

### 

Use the product within the specifications.

### **Precautions on Product Disposal**

### 


When disposing of the product, comply with laws pertaining to disposal and cleaning of wastes and have an industrial waste disposal company dispose of the product.

# CONTENTS

| PREFACE  | i   |
|--|-----|
| SAFETY INFORMATION   | ii  |
| Precautions on Product Use   | iii |
| Precautions on Product Disposal  | iii |
| CONTENTS   | iv  |
| 1. PRODUCT OVERVIEW  |     |
| 1.1 System Overview  | 1   |
| 1.2 Instruction Manuals Related to This Product  | 2   |
| 1.3 Part Name  | 2   |
| 1.4 Model Number Indication  |     |
| 1.4.1 FGRC Series  |     |
| 1.4.2 Motor and encoder relay cable (fixed/movable)                                      |     |
| 1.5 Specifications   | 5   |
| 2. INSTALLATION  | 6   |
| 2.1 Environment  |     |
| 2.2 Unpacking  |     |
| 2.2.1 Parts of the product   |     |
| 2.3 Installing   |     |
| <ul><li>2.3.1 Actuator</li><li>2.3.2 Objects transferred (table upper surface)</li></ul> |     |
|  |     |
| 3. USAGE   |     |
| 3.1 Safety Instructions  |     |
| 3.2 Using the Controller   |     |
| 3.3 Manual Operation   |     |
| 4. MAINTENANCE AND INSPECTION  | -   |
| 4.1 Periodic Inspection  |     |
| 4.1.1 Inspection item  |     |
| 5. TROUBLESHOOTING   |     |
| 5.1 Items to Check When a Problem Occurs   |     |
| 5.2 Problems, Causes, and Solutions  |     |
| 6. WARRANTY PROVISIONS   |     |
| 6.1 Warranty Conditions  |     |
| 6.2 Warranty Period  |     |

# **1. PRODUCT OVERVIEW**

### 1.1 System Overview

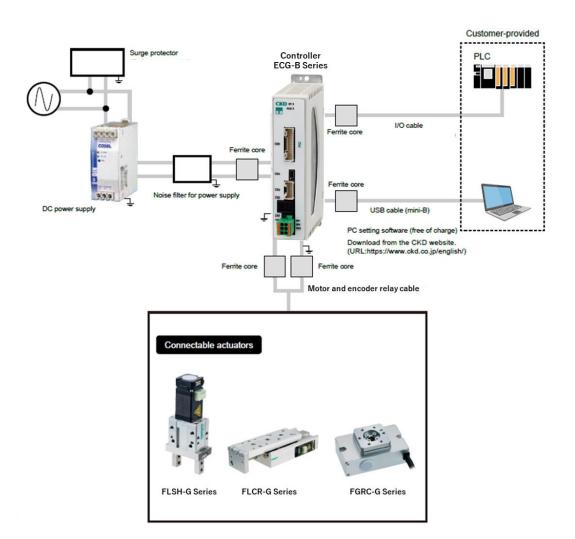

#### System components that can be purchased from CKD are listed below.


|                   | Component                     | Product name/Model no.                |
|-------------------|-------------------------------|---------------------------------------|
| This product      | Actuator                      | FGRC-G Series                         |
| Accessories       | Motor and encoder relay cable | EA-CBLME2-*                           |
|                   | Controller                    | ECG-B Series                          |
|                   | Power supply connector        | DFMC 1,5/ 3-STF-3,5 (PHOENIX CONTACT) |
| Oshi sanantaha    | I/O cable                     | EA-CBLNP2-*                           |
| Sold separately   | 24 VDC power supply           | EA-PWR-KHNA240F-24                    |
|                   | Surge protector               | AX-NSF-RAV-781BXZ-4                   |
|                   | Noise filter                  | AX-NSF-NF2015A-OD                     |
| Provided for free | PC setting software           | S-Tools                               |


# **1.2 Instruction Manuals Related to This Product**


For the instruction manuals for controllers and setting tools related to this product, refer to the following.

| Part name   | No.       |
|---|-----------|
| Controller for Electric Actuators ECG series                            | SM-A27751 |
| Controller for Electric Actuators ECG series IO-Link specifications     | SM-A40831 |
| Controller for Electric Actuators ECG series CC Link specifications     | SM-A27752 |
| Controller for Electric Actuators ECG series EtherCAT specifications    | SM-A40832 |
| Controller for Electric Actuators ECG series EtherNet/IP specifications | SM-A40833 |
| PC Setting Software for Electric Actuators S-Tools                      | SM-A11147 |

### 1.3 Part Name

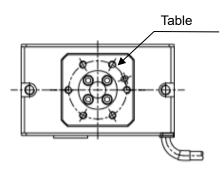


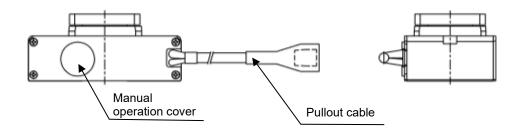

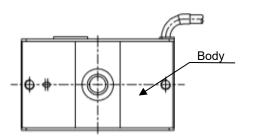


### 1.4 Model Number Indication

### 1.4.1 FGRC Series

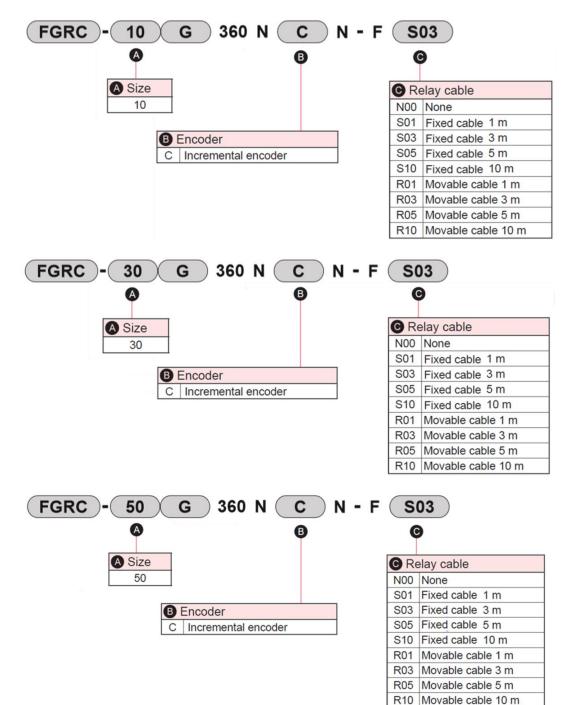

### 1.4.2 Motor and encoder relay cable (fixed/movable)

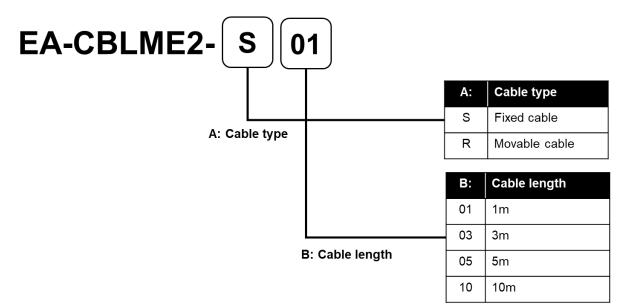

# 1.5 Specifications

|   |       | FGRC-10                                    | FGRC-30          | FGRC-50 |
|---|-------|--|------------------|---------|
| Motor                                       |       | Stepping motor                             |                  |         |
| Encoder type                                |       | Incremental encoder                        |                  |         |
| Drive method                                |       |  | Worm gear + Belt |         |
| Motor size                                  | mm    | □20  | □25              | □35     |
| Travel angle Note 1                         | deg   |  | 360              |         |
| Max. running torque Note 2                  | N∙m   | 0.89                                       | 2.71             | 4.66    |
| Repeatability                               | deg   |  | ± 0.05           |         |
| Backlash Note 3                             | deg   | ± 0.3                                      | ± 0.2            | 2       |
| Lost motion                                 | deg   |  | 0.3 or less      |         |
| Operating angular speed range               | deg/s |  | 20 to 200        |         |
| Pressing angular speed range                | deg/s | 20 to 30                                   |                  |         |
| Allowable moment of inertia<br>Note 2       | kg∙m2 | 0.0057                                     | 0.0173           | 0.0297  |
| Allowable thrust load                       | N     | 80   | 200              | 450     |
| Allowable moment load                       | Ν     | 80   | 200              | 320     |
| Allowable moment                            | N∙m   | 2.5  | 5.5              | 10      |
| Motor power supply voltage                  |       |  | 24 VDC ± 10%     |         |
| Motor section instantaneous maximum current | А     | 1.4  | 3.0              | 4.2     |
| Weight                                      | kg    | 0.65                                       | 1.05             | 1.85    |
| Insulation resistance                       |       | 10 MΩ, 500 VDC                             |                  |         |
| Withstand voltage                           |       | 500 VAC, 1 minute                          |                  |         |
| Operating ambient temperature               |       | 0°C to 40°C (no freezing)                  |                  |         |
| Operating ambient humidity                  |       | 35% to 80%RH (no condensation)             |                  |         |
| Storage ambient temperature                 |       | -10°C to 50°C (no freezing)                |                  |         |
| Storage ambient humidity                    |       | 35% to 80%RH (no condensation)             |                  |         |
| Atmosphere                                  |       | No corrosive gas, explosive gas, and dust. |                  |         |
| Degree of protection                        |       | Equivalent to IP40 (IEC standard)          |                  |         |

 Note 1
 Movable angle is up to 359.9 deg via travel instructions.

 Note 2
 Rotation torque and allowable moment of inertia change in accordance with angular speed.

 Note 3
 When stopping precision is required, stop with an external stopper, etc., and complete positioning with pressing operation.

# 2. INSTALLATION

### 

Do not use the product in a place where dangerous substances such as ignitable, inflammable, or explosive materials are present.

Ignition, inflammation, or explosion may occur.

Prevent water and oil from splashing onto the product.

A fire, electric leakage, or failure may occur. Even oil drops and oil mists are prohibited.

Make sure to hold and secure the product (including the workpiece) while installing the product.

An injury may occur if the product falls down, falls off, or operates abnormally.

Use a DC stabilized power supply (24 VDC  $\pm$  10%) with sufficient capacity as a power supply for the controller and the input/output circuit.

If the product is directly connected to an AC power supply, a fire, burst or damage may occur.

Do not work with wet hands.

An electric shock may occur. Install overcurrent protective equipment (such as a breaker for wiring and a circuit protector) on the primary side of the power supply when wiring in accordance with "JIS B 9960-1:2019 (IEC 60204-1:2016) Safety of machinery - Electrical equipment of machines -

Part 1: General requirements".

#### Do not install the product to a combustible material.

If the product is installed directly to or near a combustible material, a fire may result.

If the system is such that the machine stops in the event of a system failure such as an emergency stop or a power failure, design and implement a safety circuit or a safety device to prevent damages to the devices and injuries to people.

Install a safety fence to prevent entry into the actuator movable range.

Perform class D grounding (ground resistance: 100  $\Omega$  or less) for the product.

An electric leakage may occur and cause an electric shock or malfunction.

When wiring the product, refer to this Instruction Manual or any other relevant instruction manuals to make sure that the connectors are firmly connected and the wires are properly insulated.

Make sure that the wires do not contact other circuits and there is no ground fault and insulation failure between terminals. Otherwise, an overcurrent may flow into the product and cause damage. This may result in an abnormal operation or fire.

#### Insulate unused wires.

A malfunction, failure, or electric shock may occur.

Do not damage or pinch the cables, apply unnecessary stress to the cables, or place heavy objects on the cables.

A conduction failure or electric shock may occur.

Do not connect the communication connector of the product to other devices.

A malfunction or damage may occur.

#### Make sure to install the emergency stop button in a location where operation is easy.

Adopt a structure and wiring system that inhibit any automatic resetting of emergency stop button, and that prevent a person from accidentally resetting the emergency stop button.

When an emergency stop is executed, it may take several seconds until the machine has actually stopped, depending on the travel speed and carrying load.

#### Install the product indoors and in a dry place.

In a place where water can splash onto the product or where humidity is high (80% or more and with condensation), an electric leakage or fire accident may occur.

# Do not use or store the product in an environment where there is strong electromagnetic waves, ultraviolet rays, or radiation.

A malfunction or failure may occur.

#### Consider the possibility of power source failure.

Implement measures so as to prevent injuries to people and damages to devices even if a failure occurs with the power source.

Consider the possibility of motor failure.

Consider the operating state when restarting the product after an emergency stop or an irregular stop.

When there is a need for resetting the actuator to the starting position, design a safe control unit.

Because precision instruments are integrated, do not lay the product sideways or subject the product to vibration or impact during transportation.

Component damage may occur.

#### Do not stand on the product, use it as a foothold, or place an object on it.

A fall accident, injury due to the product falling down or off, or malfunction due to the product becoming damaged may occur.

#### Install the wiring so that no induction noise is applied.

- Avoid using the product in a place where a large current or strong magnetic field occurs.
- Do not pipe or wire the product in the same piping or wiring (with multi-conductor cables) as the power lines for other large motors.
- Do not pipe or wire the product in the same piping or wiring as the power supplies and wires for inverters used in robots. Frame ground the power supply and insert a filter into the output section.

#### **Do not use the product in an environment where a strong magnetic field occurs.** A malfunction may occur.

# Separate the power for the output section of the product from the power for inductive loads (such as a solenoid valve and a relay) that generate surge currents.

If the power is shared, a surge current will flow into the output section and cause damage. If the power cannot be separated, connect the surge absorption elements in parallel directly to all the inductive loads.

# Do not perform a withstand voltage test or an insulation resistance test in a device with the product installed.

A capacitor is connected between the circuit of the control board in the product and the metal body to prevent damages from static electricity. Therefore, performing the tests above will damage the product. If these tests are required for the device, remove the product beforehand.

# Remove all the FG (frame ground) connections of the product before performing electric welding on the device to which the product is installed.

If electric welding is performed without removing the FG connections, the product may become damaged due to a welding current or excessive high voltage and surge voltage from welding.

#### Select a power that has sufficient capacity for the number of products installed. If the capacity is not sufficient, a malfunction may occur.

#### Do not bend the fixed cable repeatedly.

If repetitive bending is unavoidable, use a movable cable.

### Secure the movable cable so that it will not move easily.When fixing, use cables with a bending radius of 63 mm or more.

#### Do not move the pullout cable of the actuator.

A disconnection may occur. Using a cable clamper, secure the connector so as to prevent it from moving. Furthermore, use cables with a bending radius of 40 mm or more.

### When installing an external stopper or a holding mechanism (such as a brake), place it at a position where it does not affect the detection of the origin position.

The origin position is detected when the power is turned on. If the detection is interfered by an external stopper or a holding mechanism, an unintended position may be recognized as the origin position.

### Do not use the product in a place exposed to ultraviolet rays or in an atmosphere where corrosive gas and salt are present.

A performance degradation, abnormal operation, or strength deterioration due to rust formation may occur.

### Do not install the product in a place subjected to strong vibrations or shocks.

If the product is subjected to strong vibrations or shocks, a malfunction may occur.

Do not use the product in a place where condensation occurs due to a sudden change in the ambient temperature.

The customer is responsible for checking the compatibility of the product with the customer's system, machinery, and device.

Connect only cables designed for the product.

A failure of the product or unexpected accident may occur.

**Do not carry or install the product by holding its cable or the movable section.** An injury or cable disconnection may occur.

Secure sufficient space for maintenance and inspection.

Maintenance and inspection cannot be performed if sufficient space is not provided and this may cause equipment stoppage, failure, or injury.

When holding the product, hold its bottom surface.

When transporting and installing the product, ensure the safety of the workers by securely supporting the product using a lift or supporting gear and by assigning more than one worker.

Install the product in a way that it is not subjected to twisting or bending force.

Before adjusting the gain, firmly secure the actuator body to a rigid device and mount the jigs.

Do not hold the controller case tightly.

When using positioning holes, make sure to use pins having the size that does not require press-fitting.

If press-fitting sized pins are used, the press-fitting load may cause the guide section to become damaged or distortion may reduce accuracy. The recommended tolerance of the pin is JIS tolerance of  $6 \mu m$  or less.

When operating the product without supplying power, make sure to use the manual operation plate.

Do not put dents and scratches on the body mounting surface and table surface that impair their flatness and perpendicularity.

When there is a load fluctuation, hoisting/lowering operation (wall hanging installation), or frictional resistance change, ensure a safe design that takes these into consideration.

These factors cause the operating speed to increase and may cause injuries to people and damages to devices.

Achieve a safe design for the devices by taking into consideration the reduction in pressing torque due to factors such as a power failure.

When the product is used with the clamp mechanism, the clamping force can decrease due to factors such as a power failure and it can cause the workpiece to become detached. Make sure to incorporate safety into the device design that prevents injuries to people and damages to devices.

# 2.1 Environment

- Check the environment temperature and atmosphere before using and storing the product.
- Use the product at an ambient temperature between 0°C and 40°C. Ventilate if heat can become trapped.
- Use the product at an ambient humidity between 35% and 80%. Do not use the product in a place where condensation occurs.
- Install the product where it is not subjected to direct sunlight and away from a heating element. Also, avoid dust, corrosive gas, explosive gas, inflammable gas, and combustible material. Chemical resistance has not been considered for the product.
- Install the actuator on a smooth and flat surface.
- In order to avoid operation fault and damage, do not install the actuator on a surface with dents.
- The controller is set using setting software (S-Tools). Leave a space of 70 mm or more in front of the controller so that the connector of the connection cable of the PC can be connected and disconnected.

### 2.2 Unpacking

- When carrying and handling the product, use extreme care not to apply impact to the product (for example, do not drop the product).
- Do not carry heavy products alone.
- Place the product horizontally when not in use.
- Do not stand on the package.
- In order to prevent deforming the package, do not place heavy objects and objects of which their load concentrates.
- When taking the actuator out of the package, hold the actuator body.
- Do not apply unnecessary force to any part of the actuator.
- Check that the model number ordered and the model number indicated on the product are the same.
- Check the exterior of the product for any damage.

### 2.2.1 Parts of the product

| Parts of the product          | Quantity |
|-------------------------------|----------|
| Actuator                      | 1        |
| Motor and encoder relay cable | 1        |

.

11


12

15

#### 2.3 Installing

### 2.3.1 Actuator

- Do not apply an excessive shock or moment to the table.
- A malfunction or damage may occur with the product.
- The flatness of the workpiece mounting surface should be 0.05 mm or less. Do not apply twisting or bending force to the product. An operation fault or damage may occur.
- For the screw-in depth and the tightening torque of the bolt for installing the body, refer to the following table.

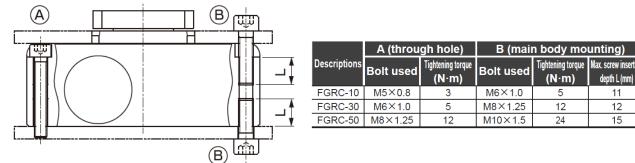


### 2.3.2 Objects transferred (table upper surface)

The flatness of the workpiece attached to the table should be 0.02 mm or less. Do not apply twisting or bending force to the product. Damage may occur.

• When attaching a jig to the table, observe the following values for the bolt screw-in length and the tightening torque.

If the bolt is too long and interferes with the body, an operation fault may occur.

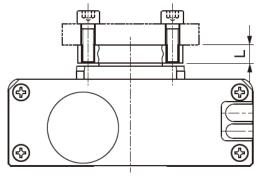

| Descriptions | Bolt used | Tightening torque<br>(N⋅m) | Max. screw insertion<br>depth L (mm) |
|--------------|-----------|----------------------------|--------------------------------------|
| FGRC-10      | M5×0.8    | 2                          | 7                                    |
| FGRC-30      | M6×1.0    | 4                          | 9                                    |
| FGRC-50      | M6×1.0    | 4                          | 13                                   |

• When attaching a workpiece to the table surface, consider the moment load. For details, refer to the "Selection guide" page in the catalog.

### 3.1 Safety Instructions

### 

**Do not enter the operating area of the device when the product is in an operational state.** The product may operate unexpectedly and an injury may occur.

When using the FGRC Series, your fingers may get caught between the body and the table.

#### Do not work with wet hands.

An electric shock may occur.

### 

Before supplying electricity to the product, check that the operation area of the device is safe. If electricity is supplied without checking safety, an electric shock or injury may occur.

Turn off the power immediately if the LED indicator on the controller does not blink even when the power is turned on.

**Do not touch the product body during or immediately after operation.** A burn injury may occur.

A built injury may occur.

Do not stand or put an object on the product.

A fall accident, injury due to the product falling down or off, or malfunction and runaway due to the product becoming damaged may occur.

Take measures to prevent damage to the human body and the device in case of power failures.

An unexpected accident may occur.

Before controlling the actuator from a position where it cannot be seen, check that it is safe for the actuator to operate.

Do not give commands that are smaller than the repetitive positioning accuracy.

The positioning control may not be performed properly.

When a power failure occurs, turn off the power to the controller.

The product can suddenly start moving when the power is restored and it can lead to an accident.

# Before moving the movable section of the product manually, make sure that the servo is turned off.

When turning off the servo, an unexpected event (such as the movable section falling off) may occur. When switching the servo off, make sure that the safety measures are implemented to eliminate danger and operate with utmoset care to ensure safety.

Do not apply a load that exceeds the allowable load specified in the "Selection guide" page in the catalog to the product.

| Do not move the movable section of the product with external force and do not use the product in an application that requires the movable section to decelerate suddenly.<br>A malfunction or damage may occur due to regenerative currents.   |
|--|
| Do not subject the product to external force when returning to the origin.<br>The origin may not be recognized correctly.  |
| Do not put dents and scratches on the movable section.<br>An operation fault may occur.  |
| Do not subject the movable section to impact.  |
| Leave a margin for the transfer load since the product life changes depending on the transfer load and the environment.  |
| If vibrations are generated, change the set speed and use the product at a speed that does   |
| <b>not generate vibrations.</b><br>Depending on the conditions of use, vibrations may be generated during an operation even when the product is used within the operation speed range.   |
| <b>Provide the required pressing force with a sufficient margin to ensure operation.</b><br>The pressing force and the maximum current values given in "1.5 Specifications" are provided as a guide. Variation in the motor torque may cause errors even when the setting values are the same. |
| <b>Do not turn off the servo while gravity or force of inertia is applied.</b><br>Turn off the servo in an equilibrium state where no gravity and force of inertia are applied or after safety is ensured.   |
| <b>Do not stop the product while it is accelerating or decelerating.</b><br>It may lead to a change in speed (acceleration) and cause a risk.  |
| <b>Do not insert fingers or an object into the opening of the product.</b><br>An injury or product damage may occur.   |
| When replacing either the actuator or the controller in a combination, make sure to check the program and parameters before operating the product.<br>An unexpected operation may lead to an accident.   |
| <b>Do not turn the power on and off frequently.</b><br>Elements in the controller may become damaged.  |
| <b>Do not use a load that does not fall within the specified range.</b><br>If the load falls outside the range, an excessive uneven load applied to the guide section may cause rattling in the guide section, deteriorate accuracy, and adversely affect service life.                        |
| To use the product for pressing, make sure to perform the "pressing operation".<br>If external contact is made during positioning operation and within the positioning range, a significant energy is generated and damage may occur.  |
| Set the target position for the pressing operation to a position that is at least 1 deg less than the external contact position (to allow for backlash).   |
| When operating the product without supplying power, make sure to use the manual operation  |
| <b>plate.</b><br>The table will not move even if external force is applied since a self-locking mechanism using gears is employed.   |
| • If a sudden step assure during table relation due to an emergency step or inching a lead   |


- If a sudden stop occurs during table rotation due to an emergency stop or inching, a load torque that exceeds the theoretical value can be generated depending on the backlash, operating conditions, and loading conditions.
- There is backlash since a worm gear is used in the drive system. Depending on the operating conditions and loading conditions, it can cause residual vibration or increase positioning time.
- When stop accuracy is required, stop the product using the external stopper and complete the positioning by performing the pressing operation.


### 3.2 Using the Controller


- For how to use the controller and the setting tool (S-Tools), refer to the instruction manual for each product.
- For the instruction manual number, refer to "1.2 Instruction Manuals Related to This Product".

### 3.3 Manual Operation

- Make sure that the servo is turned off before performing manual operation. A malfunction or damage may occur.
- Do not apply excessive load to the manual operation plate.
- An operation fault or damage may occur.
- The manual operation is mainly intended for use in starting, maintenance, and inspection. If used too often, an unexpected operation may result.
- Before using the manual operation plate, refer to the dimensions shown below to prepare the jig.
- Do not insert the jig into the ø4 hole by more than 5 mm.
- CW (clockwise): Turns table in the CCW direction.
- CCW (counterclockwise): Turns table in the CW direction.

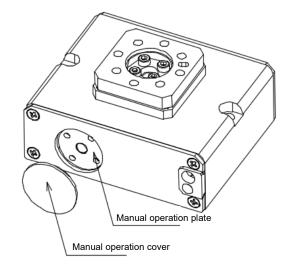

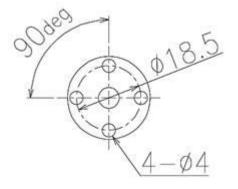

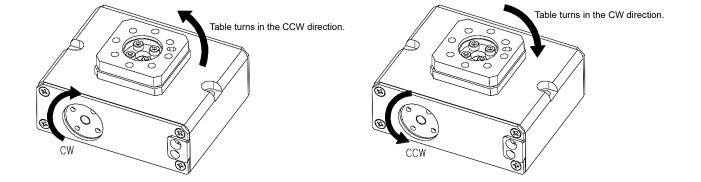

# 4. MAINTENANCE AND INSPECTION

### 

#### Install the product before wiring.

An electric shock may occur.

Do not work with wet hands.

An electric shock may occur.

Before performing wiring and inspection, wait five minutes or longer after turning off the power and check the voltage with a tester.

An electric shock may occur.

**Do not attach or remove wires and connectors with the power turned on.** A malfunction, failure, or electric shock may occur.

Do not disassemble or modify the product.

An injury, accident, malfunction, or failure may occur.

### 

Wiring and inspections must be performed by specialists.

For the lead wires used for the power cable, use wires with a sufficient diameter that can allow the instantaneous maximum current to flow.

A heat generation or damage may occur during operation.

Perform periodic inspections (two to three times a year) to confirm that the product operates properly.

When operations where the table is turned less than 45 deg are performed repeatedly, make sure to turn the table by more than 90 deg (as a rough reference, at least once a day). The bearing may run out of grease.

Turn off the power immediately if abnormal heat, smoke, odor, sound, or vibration occurs in the product.

The product may become damaged or the continuous flow of currents may cause a fire.

Stop supplying power to the product before performing maintenance, inspection, and repair. Take measures to prevent a third person from turning on the power unexpectedly.

### 4.1 Periodic Inspection

In order to use the product under optimum conditions, perform a periodic inspection two to three times a year.

### 4.1.1 Inspection item

Turn off the power before performing items 1, 2, and 3 below.

| No. | Inspection item   | Inspection method | Action  |
|-----|---|-------------------|---|
| 1   | Check that the mounting bolts on the product,<br>the screws on the terminal block, and the<br>connectors are not loose. | Looseness check   | Tighten the loose parts.  |
| 2   | Check that there are no scratches and cracks on the cables.   | Visual inspection | Replace the cable.  |
| 3   | Check that foreign matters are not accumulating or are not stuck in between the movable section.                        | Visual inspection | Clean the parts. Note 1   |
| 4   | Check that there are no vibrations or<br>abnormal sounds while the product is<br>stopped or operated.                   | Noise inspection  | Contact your nearest CKD sales office or distributor.   |
| 5   | Check that the power supply voltage is normal.  | Tester            | Check the power system and use the product<br>within the power supply voltage range described<br>in the Specifications. |

Note 1: Use a soft cloth for cleaning and make sure not to leave foreign matters on the movable section.

# 5. TROUBLESHOOTING

### 5.1 Items to Check When a Problem Occurs

When a problem occurs, ensure safety and follow the procedure below.

| 1  | Check the light status on the controller.<br><servo (when="" alarm="" is="" lamp="" off)="" the=""><br/>Lit green: Current passed to motor (servo ON)<br/>Blinking green: Current not passed to motor (servo OFF)<br/>&lt; Servo lamp (when the alarm lamp is on)&gt;<br/>Blinking green (lit once per second): Output of the upper 1 digit of the alarm code<br/>Blinking green (lit for 2 seconds, then lit once per second n times): Occurrence of alarm<br/>(n indicates the most significant digit of the alarm code.)<br/>Off green: Control power supply shutoff<br/><alarm lamp=""><br/>Lit red: Occurrence of alarm which cannot be released<br/>Blinking red (lit once per second): Occurrence of alarm which can be released<br/>Blinking red (lit once overy 2 seconds): Occurrence of warning<br/>Off red: Without occurrence of alarm/warning</alarm></servo> |
|----|---|
| 2  | Check whether there is an error on the PLC.   |
| 3  | Check the voltage of the control power supply (24 VDC).   |
| 4  | Check the alarm details.<br>Alarm details can be checked using the S-Tools setting software.  |
| 5  | Check the I/O status.<br>The I/O status can be checked using the S-Tools setting software.  |
| 6  | Confirm that the cable is neither "disconnected" nor "pinched," and that it is connected properly.<br>When checking conductivity, turn the power supply OFF and disconnect the wiring to prevent electric shock.  |
| 7  | Confirm that anti-noise measures (such as connecting a grounding wire or installing a surge suppressor) have been implemented.  |
| 8  | Check the history leading up to the trouble occurring and the operation condition when the trouble occurred.  |
| 9  | Check the product's serial No.  |
| 10 | When using the ECG-B Series, check that the actuator information written in the controller is identical with the information in the connected actuator.   |

If the problem persists, refer also to "5.2 Problems, Causes, and Solutions".

### 5.2 Problems, Causes, and Solutions

If the product does not operate as intended, check the table below for a possible solution.

| Problem Cause   |   | Solution  |
|---|---|---|
|   | Wiring is not correct.  | Check the wiring to the power.  |
| Even when power is<br>turned on, LED<br>indicator on controller | Wiring is disconnected.   | Check for pinching and disconnection of cables and check the<br>connection of connectors and terminals.                         |
| does not light up.  | Product is malfunctioning or is damaged.  | Repair or replace the product.<br>Refer to "5.1 Items to Check When a Problem Occurs" and contact<br>CKD.                       |
| LED indicator on  | Alarm has been issued.  | Refer to the setting software (S-Tools) to find and remove the cause of the alarm.  |
| controller remains lit<br>in red.                               | There is an abnormality in system.  | Repair or replace the product.<br>Refer to "5.1 Items to Check When a Problem Occurs" and contact<br>CKD.                       |
|   | Return to origin has not been performed.  | Perform return to origin (FLCR Series).   |
| No operation standby<br>completion signal is<br>output.         | Wiring for emergency stop signal is NO contact connection.                        | Change the wiring for emergency stop (EMG) to NC contact connection.  |
| output.   | Wiring is not correct.  | Refer to "2.3 Connection" in "Controller Instruction Manual (SM-A27751)" and check the wiring.                                  |
|   | Input signal is unstable.   | Input from the higher system may be causing chattering. Maintain the input signal for 20 ms or more.                            |
|   | Return to origin cannot be<br>completed or performed.                             | Transfer load may be too large. Check the Specifications.   |
|   | Setting of position, speed,<br>acceleration, or pressing force is<br>not correct. | Check the details of the point data.  |
|   | Setting of operation mode is not correct.   | Check the setting of the "operation mode" in the parameter data.  |
| Product does not<br>operate as intended<br>with PLC signal.     | Wiring is not correct.  | Refer to "2.3 Connection" in "Controller Instruction Manual (SM-A27751)" and check the wiring.                                  |
| warr 20 oighail   | Friction load is too large.   | Check the friction load during transfer.<br>Check that there is no jamming with the workpiece.                                  |
|   | Workpiece is in contact with an<br>object on slider or rod.                       | Check how the device is assembled and set up.   |
|   | Internal resistance of product has increased.                                     | Check the environment conditions and the conditions of use.<br>Check how long the product has been in use (operation distance). |
|   | Actuator body is damaged.   | Repair or replace the product.<br>Refer to "5.1 Items to Check When a Problem Occurs" and contact<br>CKD.                       |
| Product itself<br>vibrates.                                     | Connection to actuator is loose.  | Tighten the bolts.  |

| Problem  | Cause   | Solution  |
|--|---|---|
|  | Mode is set to TOOL mode.   | Change the mode to the PLC mode using the setting software (S-Tools).   |
|  | Wiring is not correct.  | Refer to "2.3 Connection" in "Controller Instruction Manual (SM-A27751)" and check the wiring.  |
| Product cannot be operated with PLC.                                     | Wiring is disconnected.   | Check for pinching and disconnection of cables and check the connection of connectors and terminals.  |
|  | Overload error occurs.  | Check the transfer load and the speed.  |
|  | Power capacity is insufficient.   | Check that the power capacity satisfies the required voltage and current.   |
| Workpiece moves<br>due to its own weight<br>during an emergency<br>stop. | Load exceeding holding force is applied.                                      | Check whether an external force greater than the holding force is applied.<br>Check the setting of the "Current during stop" in the parameter data. |
| Positioning<br>completion output<br>does not turn off.                   | Positioning completion output<br>width is too large for movement<br>distance. | Check the "Positioning width" in the point data.  |
| Pressing operation cannot be performed.                                  | (Mode is) not set to pressing operation.                                      | Check the "Operation method" in the point data.   |
| Device is out of step.   | Load or speed has exceeded limit.   | Check that the workpiece weight and the operation speed satisfy the specified values.   |
| Product cannot<br>achieve desired<br>speed (it is very<br>slow).         | It is set to pressing operation<br>instead of general transfer<br>movement.   | Check the "Operation method" in the point data.<br>Perform a gain adjustment.   |
| Overshoot occurs.  | Both transfer weight and amount of deceleration are large.                    | Check that the workpiece weight and the operation speed satisfy<br>the specified values.<br>Perform a gain adjustment.                              |
| Product cannot reach target takt time.                                   | Setting of acceleration or speed is not correct.                              | Check the "Acceleration" and the "Speed" in the point data.   |

If you have any other questions or concerns, contact your nearest CKD sales office or distributor.

# 6. WARRANTY PROVISIONS

### 6.1 Warranty Conditions

#### Warranty coverage

If the product specified herein fails for reasons attributable to CKD within the warranty period specified below, CKD will promptly provide a replacement for the faulty product or a part thereof or repair the faulty product at one of CKD's facilities free of charge.

However, following failures are excluded from this warranty:

- Failure caused by handling or use of the product under conditions and in environments not conforming to those stated in the catalog, the Specifications, or this Instruction Manual.
- Failure caused by incorrect use such as careless handling or improper management.
- Failure not caused by the product.
- · Failure caused by use not intended for the product.
- Failure caused by modifications/alterations or repairs not carried out by CKD.
- Failure that could have been avoided if the customer's machinery or device, into which the product is incorporated, had functions and structures generally provided in the industry.
- Failure caused by reasons unforeseen at the level of technology available at the time of delivery.
- Failure caused by acts of nature and disasters beyond control of CKD.

The warranty stated herein covers only the delivered product itself. Any loss or damage induced by failure of the delivered product is excluded from this warranty.

#### Confirmation of product compatibility

It is the responsibility of the customer to confirm compatibility of the product with any system, machinery, or device used by the customer.

#### Others

The terms and conditions of this warranty stipulate basic matters.

When the terms and conditions of the warranty described in individual specification drawings or the Specifications are different from those of this warranty, the specification drawings or the Specifications shall have a higher priority.

### 6.2 Warranty Period

The product is warranted for one (1) year from the date of delivery to the location specified by the customer.